



Lab Instructions

AOAC EXTRACTION METHOD


- 1**
- Check Expiry Date
 - Check Desiccant Pouch:
Blue = OK
Pink = Do not use test

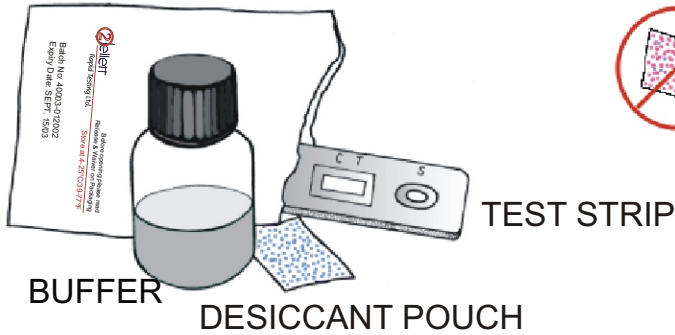


- 2** Place 400 μL of buffer in a vial.

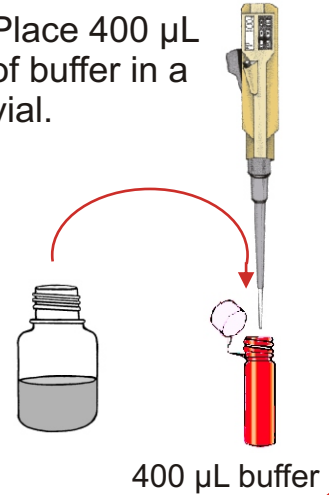

- 3** Add 100 μL of shellfish extract to the vial in step 2.

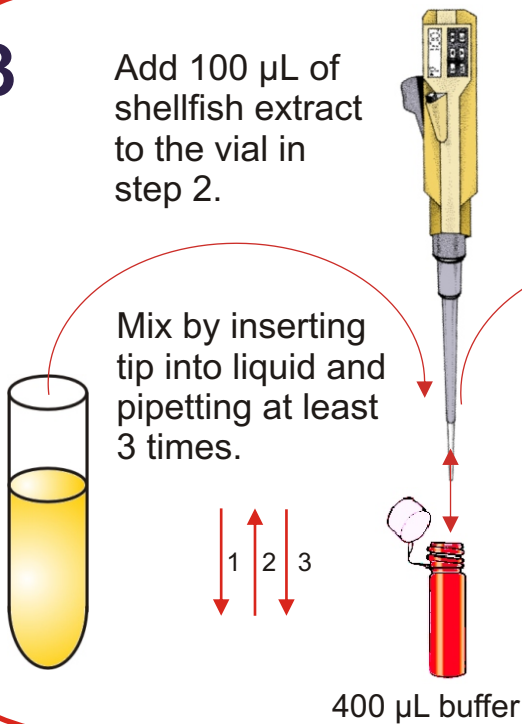

- 4** Place 100 μL of the mixture into sample well "S".

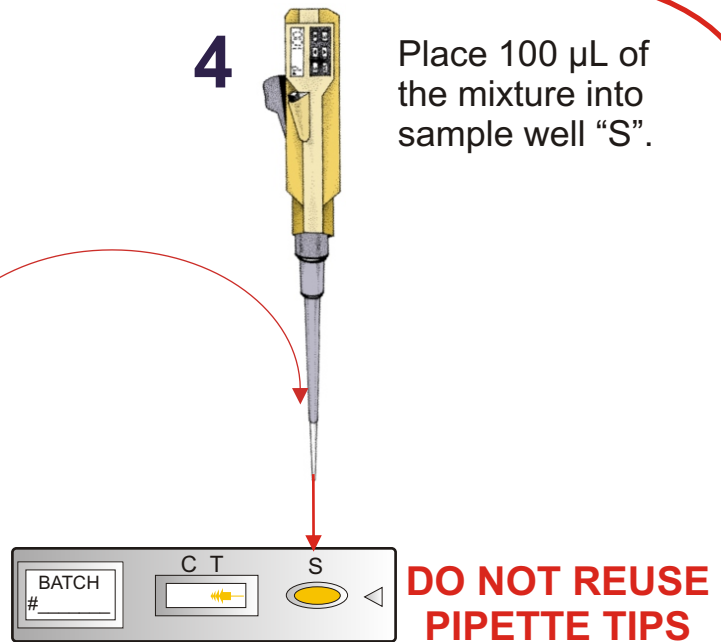

- 5** Read your results between 35 minutes and one hour. Turn this page for C & T line interpretation.

